# Basic Manual



W44S by Sony Ericsson



Contents/ Before use

Phone call

Text input

Phone book Pair Function

Mail

Camera

**EZweb** 

au Media Tuner

**EZ Navi** 

au Music

EZ FeliCa

EZ·FM

PC site viewer

Troubleshooting/ Remote lock

Other features/Index

#### Welcome

Thank you for purchasing a W44S.

Before using your W44S, read this W44S Basic Manual (PDF manual) to ensure correct use of your W44S. After you have finished reading this manual, save this PDF manual on your PC or recordable media, and store the printed manuals in a safe place so you can retrieve them whenever they are needed.

If you lose any of these manuals, contact an au shop or Customer Service Center.

#### Printed manuals for W44S (Japanese)

The W44S comes with the "W44S かんたんマニュアル" and the "W44S 取扱説明書."





The following manuals are also available from the au homepage:

- ・The downloadable "W44S かんたんマニュアル" and "W44S 取扱説明書" (http://au-pro.kddi.com/phone/torisetu/index.html)
- · The au online manual (Japanese) for searching by keyword

(http://www.au.kddi.com/manual/index.html)

The au online manual (Japanese) is also available from the EZweb:

<To access>

If you have any trouble with your cellphone, please visit the Sony Ericsson Mobile Communications Japan, Inc. web site and find out your problem before calling for professional repairs.

- · From your W44S  $\Rightarrow$   $\stackrel{\frown}{}$  (EZ)(for at least one second)(SonyEricsson@ez)
- $\cdot \text{ From your PC} \Rightarrow \text{http://www.SonyEricsson.co.jp/}$ 
  - The font, typeface, shape and color used in this manual may differ from those used on actual screen or may be omitted.

## **Etiquette**

## Cellphone etiquette

- Cellphones emit weak signals at all times even if you just turn the power on.
- Enjoy using your cellphone safely without disturbing those around you.

#### Some places forbid the use of cellphones.

- Do not use your cellphone while you are driving.
   Doing so is dangerous and against the law.
- The use of a cellphone on aircraft is against the law. Be sure to turn your cellphone off before you board an aircraft.



#### Consider where to use your cellphone and be careful of how loud you are speaking.

- Do not make calls while in cinemas, theaters, museums, libraries or other similar places. Turn your cellphone off or set it to the manner mode to prevent others around you from being disturbed by the ringtone.
- Use your cellphone in places where you are not blocking traffic from passing.
- Move to areas where you do not disturb others on trains or in hotel lobbies.
- Take care not to speak too loudly during conversations.
- · Ask for other people's permission before taking their photos with your cellphone's camera.

## Signals from cellphones may adversely effect medical apparatus and equipment.

- Some people close to you in busy places such as crowded trains may have a pacemaker.
   Turn your cellphone off in such places.
- Abide by the rules of hospitals and other medical institutions where it is forbidden to use or possess cellphones.



## Basics of the cellphone

#### What W44S offers

### Mail/EZweb

You can send mails to other cellphones or PCs. You can download Chaku-Uta® (ringtones), Chaku-Uta-Full® (full songs) or wallpaper via EZweb.



Page **48,70** 

### Camera

You can take photos or record movies and send them by e-mail easily.



Page **62** 

#### au Media Tuner

You can enjoy EZ Television (1Seg), Digital Radio or EZ Channel-Plus with simple switching operation.



Page **78** 

#### EZ Navi

W44S supports "EZ Navi Walk," "Position Search" and "Area Message" functions to confirm various location information.



Page **82** 

#### au Music

W44S can be used as a portable music player.



Page **86** 

### EZ FeliCa

You can go shopping and use your cellphone for e-money, as well as use it as member's cards or point cards.



Page **90** 

## Manner mode and record message

#### Manner mode

You can use the manner mode to turn ringtones and other tones off to prevent others from being disturbed.

Hold down (ATF) for at least one second in the idle screen.



Page **29** 

### Record message

You can record messages from other parties using answering message when you are unable to answer the call.

Hold down For at least one second in the idle screen.



Page **32** 

## Check the power, the signal, and the battery!

Usually, keep the cellphone's "power" on.

To make or receive calls, turn the power on. Hold down for at least one second.



Page 18

## You cannot connect where you are not able to get a "signal."

It is sometimes difficult to get a signal in places even within the service area.

indicates the reception strength.



Page 18

#### Pay attention to the remaining "battery" power.

The cellphone may not function properly if the remaining battery power is low.

indicates the remaining battery power.




Page 18

## Do not use the cellphone while driving

It is against the law to even handle a cellphone while driving.

(November 1, 2004 Implementation of the Revised Road Traffic Law Enforcement)







X Holding the cellphone to talk

## Use drive mode or turn the power off while driving

### Drive mode

When the drive mode is set, the answering message saying "I am driving right now. Please leave your name and message after the beep." plays in Japanese and the caller's message can be recorded.

Press ( and to select "Drive."



## Watch out for spam and one-ring call!

## If you get incoming spam...

You can use the mail filter function to block the mail you specify or mail marked with "未承諾 広告※" (which may be spam).

The following mail functions are available for preventing spam:

- ・"未承諾広告フィルター": To block spam
- ・"アドレスフィルター": To filter various addresses "指定拒否設定": To reject specified mails "指定受信設定": To receive specified mails only



#### If you have an incoming call from an unknown number...

Such calls may be a scam to get you to return a call to the service with very high charges. This is called a "one-ring call."



The icon will appear in the Received calls when you receive a one-ring call.

Be careful when you return a call to a number you don't know.



## **Disaster Message Board Service**

### About Disaster Message Board

If a large scale disaster occurs, you can register your vital information through EZweb. The registered vital information can be viewed from anywhere in Japan through EZweb or the Internet.


## Registering the vital information

- ◆If a large scale disaster occurs, from your cellphone you can register your vital information such as your condition or comments to the "Disaster Message Board" created on by EZweb.
- ◆After registering your vital information, you can notify it by e-mail to your preregistered family or acquaintances. They will be able to know that you posted your vital information on the "Disaster Message Board."

#### Viewing the vital information

- ◆You can view the vital information of a person you want to know by entering the phone number from EZweb or the Internet.\*\*
- ※ You can view the vital information from other carriers' cellphones (except for TU-KA), PHS or PC by accessing http://dengon.ezweb.ne.jp/.



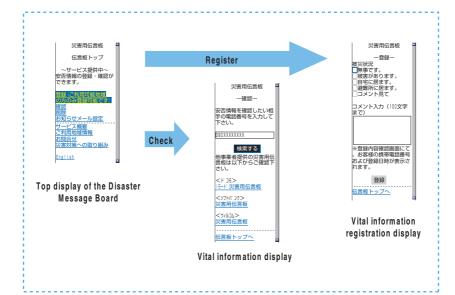

- The registered information is saved for up to 72 hours.
- Up to 10 entries can be registered per phone number. When the number of entries exceeds 10, the oldest entry will be overwritten.
- A demonstration for this service can be viewed from (EZ) → use → to select (EZweb)→use → and → to select "Top menu"→"auお客さまサポート" (au Customer Support)→"災害用伝言板(デモ版)."
- Pou can use the English version by selecting "English."


## **Contents**

Etiquette		
	Cellphone etiquette	1
Basics of the cel	llphone	2
Dasies of the cel	What W44S offers	_
	Manner mode and record message	
	Check the power, the signal, and the battery!	
	Do not use the cellphone while driving	
	Use drive mode or turn the power off while driving	
	Watch out for spam and one-ring call!	
	Disaster Message Board Service	
Defere use	•	
Before use		10
	Checking the package	
	How to open W44S	
	Names of parts	
	How to charge the battery	
	How to connect stereo earphone to W44S	
	How to use the keys	
	Turning the power on	
	Before using English display	
	How to read the display	
	Displaying the menu	
	Initial settings for e-mail and EZweb	
	Confirming your cellphone number/e-mail address	
	Changing your e-mail address	
Phone call	· · · ·	
Pilone Can	***	
	Making a call	
	Receiving a call	
	Redialing the number (Dialed/Received)	28
	Redialing the number (Dialed/Received)	28 28
	Redialing the number (Dialed/Received)	28 28
	Redialing the number (Dialed/Received)	28 28 29
	Redialing the number (Dialed/Received)	
Total in cont	Redialing the number (Dialed/Received)	
Text input	Redialing the number (Dialed/Received)	
Text input	Redialing the number (Dialed/Received)	
Text input	Redialing the number (Dialed/Received)	
	Redialing the number (Dialed/Received)	
Text input Phone book	Redialing the number (Dialed/Received)	
	Redialing the number (Dialed/Received)	
	Redialing the number (Dialed/Received)	
	Redialing the number (Dialed/Received)	
Phone book	Redialing the number (Dialed/Received)	
	Redialing the number (Dialed/Received)	
Phone book	Redialing the number (Dialed/Received)	
Phone book	Redialing the number (Dialed/Received)	
Phone book	Redialing the number (Dialed/Received) Changing the volume during a call	28 28 29 30 30 32 34 34 40 42 45 46 46
Phone book  Pair Function	Redialing the number (Dialed/Received) Changing the volume during a call	28 28 29 30 30 32 34 34 40 42 45 46 46 47 48
Phone book  Pair Function	Redialing the number (Dialed/Received)	
Phone book  Pair Function	Redialing the number (Dialed/Received) Changing the volume during a call	

	Replying to a received e-mail	
	Reading e-mails with photo or movie attached	
	Filtering spam	
	Using C-mail	
	Creating and sending C-mail	
	Opening a received C-mail	60
Camera		62
	What you can do with the camera	
	Successful taking of photos/movies	
	Taking photos	
	Recording movies	
	Viewing photos/movies you have taken	68
	Attaching a photo/a movie to e-mail	69
EZweb		70
LLIIOD	About EZweb	
	Displaying the EZ Top menu	
	Saving your favorite sites	
	Viewing a site saved to the Favorite site	
	Confirming your call costs	
	Downloading a Chaku-Uta®(ringtone)	
	Downloading a Chaku-Uta-Full®(full song)	
	EZ Channel-Plus/EZ Channel	
au Media Tuner		78
au Meula Tullei		
	What you can do with au Media Tuner	
	Enjoying EZ Television (1Seg)/Digital Radio	
	Enjoying EZ Channel-Plus	
	., ,	
EZ Navi		82
	What you can do with EZ Navi	
	What you can do with Security Navi	84
au Music		86
	What you can do with au Music	
	Playing back a Chaku-Uta-Full® (full song)	
EZ FeliCa	, 0	90
EZ FEIIGA	What da % E7 E-100-	
	What you can do with EZ FeliCa	
	Communicating with reader/writer	
	Using FeliCa-supported EZ apps	
EZ · FM		94
	How to listen to EZ • FM	94
	Listening to EZ • FM	95
PC site viewer		97
	What you can do with PC site viewer	
	Mastering operation basics	
	Waster in a oberation basics	
		99
Troubleshooting	Using "待受指定" (Standby assignment)	
Troubleshooting	Using "待受指定" (Standby assignment)	101
Troubleshooting Remote lock	Using "待受指定" (Standby assignment)	
	Using "待受指定" (Standby assignment)	101 102
Remote lock	Using "待受指定" (Standby assignment)	101 102 102
	Using "待受指定" (Standby assignment)	101 102

## Before use

## Checking the package

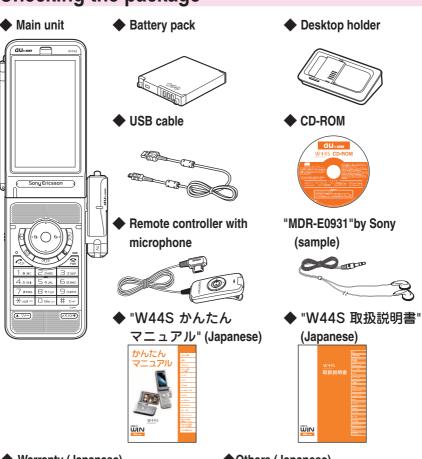


- Warranty (Japanese)
- Safety Precautions (Japanese)
- ◆Others (Japanese)
  - GLOBAL EXPERT User's Guide (Leaflet)
  - · Osaifu-Keitai 

    Simple Manual (Leaflet)
  - · LISMO! Announcement
- "Memory Stick Duo" (sold separately) and Memory Stick Duo adaptor (sold separately) are not included in this package.
- AC adaptor is not included in this package. Please purchase our standard AC adaptor 01 (optional).


## How to open W44S

There are two styles when opening W44S. You can open up W44S vertically ("Keitai Style"). You can also open W44S horizontally to the side ("Mobile Theater Style").

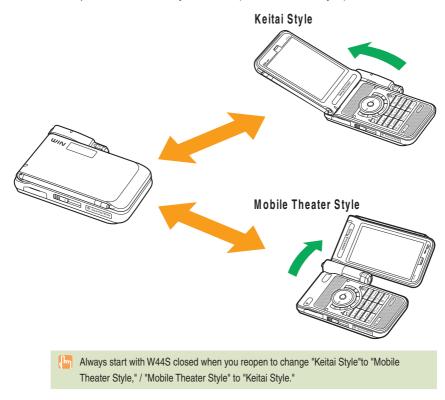

## Names of parts



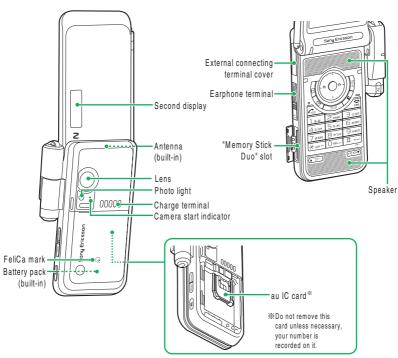

## How to charge the battery

The battery pack is not fully charged at the time of purchase. Before you use the W44S, charge the battery pack.

1

Connect the standard AC adaptor 01 (optional) to the connecting terminal (Power source).




Carefully check the connector shape, and then connect it.

2

Fold out the power plug of the standard AC adaptor 01 (optional), and plug it into a 100 V AC power outlet.

3

Push W44S (Battery pack attached) onto the Desktop holder.

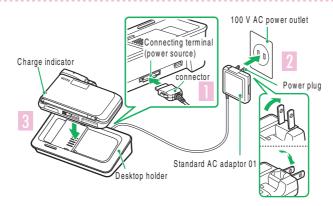

Charging is in progress→

Charge start tone sounds and the charge indicator lights up in red.

appears.

Charging is finished →

Charge completed tone sounds and the charge indicator light turns off.



When the battery is fully charged, pull out W44S upwards.

#### How to charge the battery (continued)

Charging by directly connecting the standard AC adaptor 01 (optional)


You can also charge the battery pack by directly connecting the standard AC adaptor 01 (optional) to the W44S.





## How to connect stereo earphone to W44S


- Connect the stereo earphone to the remote controller with microphone.
- Slide the earphone terminal cover to open in the direction of the arrow (as shown below).
- Insert the stereo earphone plug aligned to the earphone terminal side.

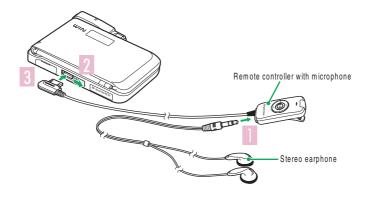




Do not force to connect in the wrong direction. Otherwise, it may cause damage. Please connect in the direction as shown in the illustration above

## How to use the keys

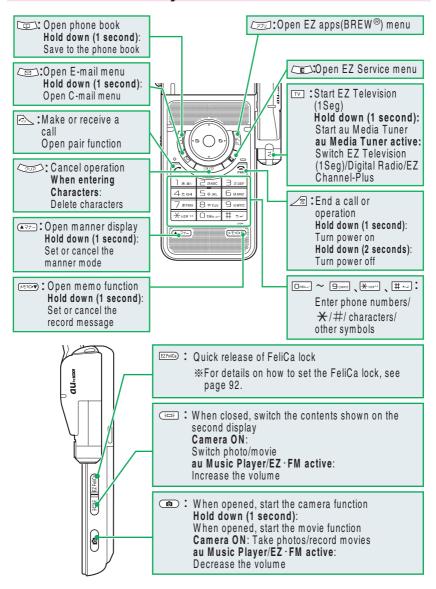

#### How to use the keys (continued)

How to use cross controller™

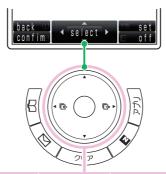


Display	Description in this manual	Operation	Explanation
select >	<b>(</b>	( b C -)	Press up and down  Move the cursor up and down  Operations in the idle screen  * Hold down (1 second):  Open schedule  Phold down (1 second):  Open data folder (page 68)
e jec t			Press left and right Move the cursor left or right Display previous or next screen Operations in the idle screen  Open Received calls (page 28) Open Dialed calls (page 28)
<b>√</b> seledt ▶	•	(-B D-)	Press center (center key) Select the item Operations in the idle screen Open Main menu Hold down (1 second): Set or cancel keylock

Left/right key in Mobile Theater Style works the same as up/down key in Keitai Style. Same as up/down key in Mobile Theater Style works as left/right key in Keitai Style. In this guide,



Soft keys work according to the displayed indication as shown below.

The displayed indications and function of the keys will vary depending on the operation selected.

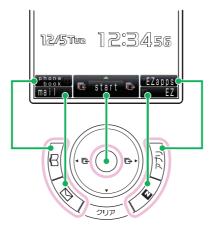

### How to use stereo earphone

With au Media Tuner, au Music Player or EZ • FM active, you can use stereo earphone to perform operations described below.

ponomi ope	orationio accombca bolow.		
Operation		Explanation	
Operation	au Media Tuner active	au Music Player active	EZ • FM active
(	_	Press center End au Music Player Operations in the idle screen Start BGM playing Operations during BGM playing End au Music Player	Hold center down (1 second) End EZ • FM Operations in the idle screen Hold center down (1 second): Start EZ • FM
<del>*</del>	Press left and right Select channel**	Press left and right Skip to the beginning of the next (or the current) audio file Hold down (1 second): First forward or rewind	Press left and right Select radio station Hold down (1 second): Auto tuning
+	Press up and down Adjust the volume**1	Press up and down Adjust the volume	Press up and down Adjust the volume

%1 Above operations are not available during BGM playing.

## Turning the power on

Hold down for at least one second.





Check the remaining battery power.

Fully charged	Medium	Low	Fully discharged

- · Charge the battery pack when the power is low.
- " [ appears during charging.

Check the reception strength. M



- Medium Strong Very weak • You cannot receive or make calls when " 國旗" (Out of service area) is displayed.
- You may not be able to receive or make calls when " \( \text{" (Very weak)} \) is displayed.

### To turn the power off

胐

Hold down for at least two seconds.

## **Default settings**

The followings are set by default.


Chg Lock No. (Change Lock No.)	1234	Font size	General font: Large EZweb font: Middle E-mail font: Middle
Caller ID	ON	FOIR SIZE	C-mail font : Large Input font : Large

## Before using English display

### To set English display

1) Press  $\bullet$   $(\mathcal{A}\mathcal{A}-\mathcal{A})$  in the idle screen  $\rightarrow$  press  $\bullet$ 

## How to read the display

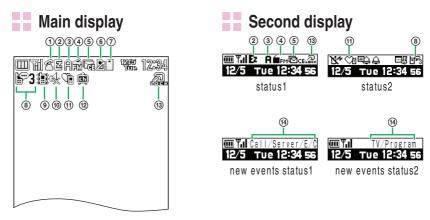


	lcor	1 <sup>**1</sup>	Description
1	É	_	During a call
2	Z	Ez	While you are using EZ Service menu/EZweb
	Â	A	While you are using EZ apps
3	<u> </u>	Œο	While you are using PC site viewer
	Ŕ	ÉFM	While you are using EZ·FM
4	<b>®</b>	•	While you are using au Music Player
	Ê	Ó	While you are using au Media Tuner
(5)	િલ	©ce	When mail was received but not yet read
6	<b>2</b>	_	When there is a missed call
7		_	When the "Memory Stick Duo" (sold separately) is inserted
(8)	₩3	<u></u> 193	While record message is set
			The number of recorded messages (1 to 3)
9		_	When the vibrator is set to "ON"
10	ı⊈	_	When the ring volume is set to "OFF"
11)	Ti	CJ4	While the manner mode is set
	0		When an EZ Channel-Plus/EZ Channel program is registered
12		_	(" (" is displayed when a program is updated.)
13	<b>A</b> .	S.	When the FeliCa lock is set to "ON"
		Call	When there is a missed call
		Server	When there is an unreceived e-mail stored at the center
		E-mail	When an e-mail was received
14)	_	C-mail	When a C-mail was received
		TV	EZ Television (1Seg) start time (you set) comes
		Radio	Digital Radio start time (you set) comes
		Program	When there is program information or an updated program of EZ Channel-Plus/EZ Channel
\*/ a	Maria		is an the left. Second display ican is an the right

<sup>%1</sup> Main display icon is on the left, Second display icon is on the right.

## Displaying the menu

W44S offers various settings/functions by using "Main menu" and "EZ Service menu" in Keitai Style/ "Theater menu" in Mobile Theater Style.





## **EZ Service menu**


You can access the information sites on EZweb and use EZ Navi, EZ Channel-Plus/ EZ Channel, etc.



#### Displaying the Main menu (continued)

#### Theater menu

When you reopen W44S in Mobile Theater Style with the idle screen displayed, My Screen appears. You can call up Theater menu from My Screen.

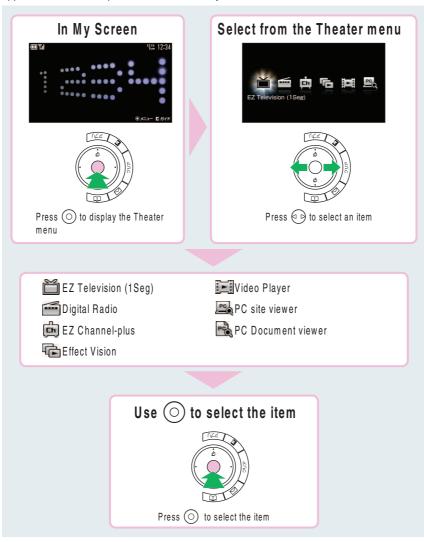

## Initial settings for e-mail and EZweb

If you subscribed to the EZweb service, make the following initial settings.

Press (mail) in the idle screen, and press (ok).





2

Press (ok).



(Im

Without EZ News Flash settings, EZ News Flash setting screen appears.

You can also initialize the settings by pressing (EZ), (EZ), (EZapps) or (TV key), or holding down (EZ FeliCa key) for at least one second.

Your e-mail address is automatically determined when you initialize the settings.

#### If you have not subscribed to EZweb service yet

Contact an au shop or Customer Service Center. You need to subscribe to the EZweb service to use e-mail, EZweb or other EZ services.

## Confirming your cellphone number/e-mail address

Press (start) in the idle screen, and press .

You can confirm your cellphone number and e-mail address.

	20,77	THE PAR
] as.e/:	≥ #ABC	Э зоег
4 ж вні	5 # JKL	Б в ммо
7 st poss	8 ютиv	9 swxz
<del>X</del> 42* **	D tolk in-	# 50


XEEO▼)





You can also confirm your cellphone number and e-mail address by pressing  $\bullet$  (start) in the idle screen, and use  $\bullet$  and  $\bullet$  to select "Func/Settings"  $\rightarrow$  "Profile."

## Changing your e-mail address



Press (mail) in the idle screen. Press to select "Settings," and press (select).





Press to select "Other," and press (select).

Press (select "Yes," and press (select).






Press ( to select "Eメール アドレスの変更," and press ( (Select).





Press to select the input field, and press (Edit).

Enter your security code, and press (ok).





(Jm)

Security code is the 4-digit number that you wrote in the application form when subscribing.

**₽** 

Note that no setting operation is allowed until the following day if you enter the wrong security code three times a day.

Press 🌓 to select "送信," and press 🍥 (Select).
Press 🗣 to select "承諾する,"

and press ( ) (Select).





Press to select the input field, and press (Edit).

Enter the text before @, and press

	207	PAR PAR
] as.e/:	2 #ABC	Э ёрег
4 д вні	5 ≈ JKL	6 ts MN0
7 ærons	8 Фтич	9 бихүг
<del>X</del> 1127 **	D 256 .0−	# 5-4
		715-
(▲ マナー)		(X € ±0> ▼)



(Im

(●) (ok).

For details on how to input e-mail addresses, see page 35.

Press ( to select "送信," and press ( Select).





#### When the e-mail address cannot be changed

The e-mail address that you entered is already used. Enter a different e-mail address.

Press to select "OK," and press (Select).





Jhn Jhn

For details on how to confirm your e-mail address, see page 23.

## Phone call

When making a call, open W44S in Keitai Style.

## Making a call

Press DDEANGT to PEWXYZ to enter the other party's phone number.







To call a regular phone, enter the phone number starting with the area code.

To notify the other party of your cellphone number

Enter "186" before the cellphone number of the other party.

Not to notify the other party of your cellphone number

Enter "184" before the cellphone number of the other party.

Press .







When you have finished the call, press 2.

## Receiving a call

Press or (call) to answer the call.







When you have finished the call, press \_\_\_\_\_.

## The display when you receive a call

Phone number	When the other party has set to notify Caller ID  If the other party's name and phone number are already saved in the phone book, that person's name is also displayed
"ID Unsent"	When the other party has set not to notify Caller ID
"Payphone"	When you have received a call from a payphone
"Not support"	When you have received a call from a party that is not able to notify Caller ID



ID Unsent



#### The display if you are unable to answer a call

If you are unable to answer a call, you are notified that you had a call on the display.

If you press ( ) (select), you can confirm the phone number of the other party that called you and redial that party.





In To return to Main menu from the above status, press 👓 or 🔎 to move the cursor out of the icon, then press ( ) (start).

## Redialing the number (Dialed/Received)

Press • in the idle screen.







#### Icons of Received calls

- :The call that you did not answer (missed call)
- incoming time (one-ring call)
- :The message stored at the Voice Mail center

Press to select the phone number you want to call, and press



The call is connected to the phone number you selected.

(har

In each memory, the phone numbers of last 30 calls can be saved.

## Changing the volume during a call

Press 🗘 during a call.

- The volume increases (Level 1 to 5).
- The volume decreases (Level 5 to 1).





## **Setting the manner mode**

The W44S vibrates to notify you of incoming calls.

1

## Hold down (ATF) for at least one second in the idle screen.

The manner mode is set, and 3 4 and 4 appear in the display.

At the same time, record message is set, and appears in the display.

7 жмя 8 ⊳ти∨ 9 бм	
	9 swxz
V 0 #	
	- # ==



#### To cancel the manner mode

Hold down • for at least one second in the idle screen.

There are four types of manner settings: "Manner," "Silent," "Drive" and "Original."

## Changing the volume and tone of the ringtone

Example: When setting a "preset" ringtone

1

Press (start) in the idle screen.





Press to select "Func/ Settings," and press
(select).





Press to select "Sound/
Vibrator," and press
(select).





Press to select "Incom. call," and press (select).





Press to select "Volume," and press (select).





Press ( to adjust the volume, and press ( ) (ok).





"OFF" :The ringtone does not sound.

:The ringtone sounds at the level you set. "1" to "5" "STEP DOWN" :The volume of the ringtone decreases. "STEP UP" :The volume of the ringtone increases.





"STEP DOWN" and "STEP UP" can be selected by pressing ( ) over "5."

Press 🜓 to select "Melody," and

press ( ) (select).





"Let It Know" is set by default.

Press ( to select "Preset," and press ( ) (select).





If you press ( ) (play), the ringtone you selected plays back.

If you press ( ) ( ) while the ringtone is being played, W44S stops playing.

Press 🗘 to select a ringtone, and press (save).



## **Setting the record message**

Hold down (\*\*\*\*) for at least one second in the idle screen.





Record message is set, and \( \) appears in the display.

You can also use the record message to record a message from the other party by pressing (memo) while receiving a call.

You can record up to three messages within 20 seconds each.

## To cancel record message

Hold down for at least one second in the idle screen.

If the record message still contains any message, [1] remains in the display even after canceling record message. [1] disappears when record message data is deleted.

When you turn the power off or when you are in a place where the signal is weak, use Answering Service (Voice Mail).

## Playing back recorded messages

#### When a message is recorded

A message and [67] (number of recorded messages) appear in the idle screen.



Press

Press 👀 in the idle screen.





2

Press to select "Record msg," and press (select).





3

Press to select "Play msg," and press (select).





4

Press to select the recorded message to play back, and press (play).





(hr

You can delete recorded messages by pressing (delete) while the recorded message is playing back or by pressing (delete) after playing the recorded message.

## **Text input**

## Changing the input mode

Input text by changing the input modes below.



漢 :Kanji/Hiragana mode

册/团 :Kana mode (single/double byte)

 $\verb| aA|/A : English mode (single/double byte)|$ 


12/1 :Number mode (single/double byte)

1

Press (mode) in the text input screen.



Each time you press (mode), the input mode changes in following order: Kanji/Hiragana  $\rightarrow$  Kana  $\rightarrow$  English  $\rightarrow$  Number  $\rightarrow$  Kanji/Hiragana...

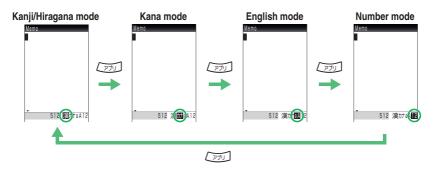

(lm

The input mode that you can select is different depending on the current input screen.

# Inputting text

#### To input alphanumerics

Change the input mode to the English mode (page 34).


In the text input screen, press the keys as described in the table below.

#### ◆ Character key assignment table (single byte alphanumerics)

	Number of times to press the key												
Key	1	2	3	4	5	6	7	8	9	10	11	12	13
] #s.e/:		@	/	:	-	_	~	1					
2#ABC	а	b	С	Α	В	С	2						
∃∜ DEF	d	е	f	D	Е	F	3						
4 toghi	g	h	i	G	Н	1	4						
5#JKL	j	k	ı	J	K	L	5						
6×100	m	n	0	М	N	0	6						
7# PORS	р	q	r	S	Р	Q	R	S	7				
<b>8</b> ≈πυν	t	u	٧	Т	U	٧	8						
9 6 шхуг	w	Х	у	Z	W	Χ	Υ	Z	9				
D86.0-	Space	!	?	-	,	,	;	(	)	"	&	¥	0
<del>X</del> 000*** ** 1	!	?	-	,	,	;	(	)	"	&	¥		
# 50 *2	Break lines												

- ※1 ★ out is also used to switch between uppercase and lowercase of current displayed characters.
- ※2 When you enter the characters by pressing keys, #== is used to reverse the order of characters to be appeared (Back Space function).

Example: 
$$2\pi ABC$$
  $\rightarrow 2\pi ABC$   $\rightarrow 2\pi ABC$   $\rightarrow 2\pi ABC$   $\rightarrow 2\pi ABC$ 



#### Inputting text (continued)

Example: To input "tomy1" in the mail address



#### Input the text before @.

t : Press Bゃтυν once.


o : Press 🕞 three times and press once.

m: Press 6 and once.

y: Press 9 three times.

1 : Press Table eight times.

For details on how to input "@ezweb.ne.jp," see page 39.

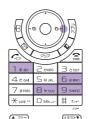




## To consecutively input characters assigned to the same key

Input the first character, press and press the next character key.

After inputting the first character, no operation for about four seconds automatically moves entering position.

Example: To input "ab"

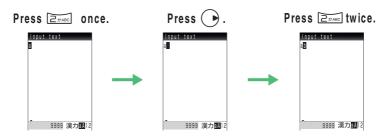

#### To input uppercase characters



#### To delete characters



Hold down for at least one second.

abcde (All characters are deleted.)

#### Inputting text (continued)


#### To input pictorial characters, symbols and emoticons

Press (U/smb) in the text input screen.

Each time you press (U/smb), the character group



Each time you press (□)/smb), the character group changes in following order: Pictorial characters→Symbols (double byte)→Symbols (single byte)→Emoticons→Pictorial characters...

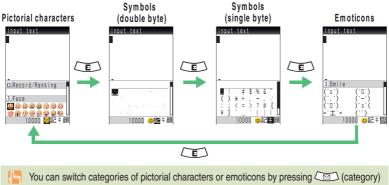

on each selection screen.

Press to select the character group you want to use, and press (select).





(Jun)

The character group that you can select is different depending on the current input screen.



You can enter your frequently used sentences using our useful sentence list.

Example: To input "@ezweb.ne.jp" in the mail address

Press (option) in the text input screen.





Press to select "useful sentence," and press (select).





Press to select "Internet," and press (select).





Press to select "@ezweb.
ne.jp," and press (select).





# Phone book

You can save up to 1,000 phone numbers or e-mail addresses.

# Saving to the phone book

Hold down (phone book) for at least one second in the idle screen.





Press to select

NAE (Name), and press

(select).





Enter the name, and press

(a) (ok).

(JP reading) is automatically entered.



For details on how to enter text, see page 34.

Press to select

(Phone no.1), and press
(select).





Enter the phone number, and press (ok).

" Mobile" is automatically entered to a (phone type).





(hm

When saving a regular phone number, start with the area code.

To end saving to the phone book, jump to step 8.

Press to select










Enter the e-mail address, and press ( ) (ok).

" Mobile" is automatically entered to (e-mail address type).

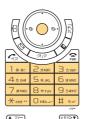



Jh.

For details on how to enter e-mail addresses, see page 35.

Press 📨 (cmplt).





The entry is automatically saved to the smallest available memory number from 000 to 999.

ĮII.

You can also save other items such as groups, ringtones, postal addresses and birthdays.

# **Editing the phone book**

Example: To edit phone numbers

Press (phone book) in the idle screen.





To switch from the " あ " to "ETC" display lines

Press •.





Press to select the entry to edit, and press (select).





Press (edit).





Press 🗘 to select the item you want to edit (in this case, a), and press ( ) (select).





5

Edit the information, and press

• (ok).





6

Press (cmplt).



# Making a call from the phone book

Press (phone book) in the idle screen.





To switch from the " あ " to "ETC" display lines

Press •.





Press • to select the person to call, and press • (select).





Press to select the phone number, and press .





# Saving from Dialed/Received calls

Press • in the idle screen.

( ): Display Received calls. ( ): Display Dialed calls.





Press 🜓 to select the phone number to save in the phone book, and press (save).





"New": Create and save a new address.

"Add" : Add and save newly added information.

Press ( to select "New," and press ( ) (select).



The phone book edit screen appears. The phone number you selected is automatically entered.



For details on how to save information in the phone book, see steps 2 to 8 on pages 40 and 41.

# **Pair Function**

# Saving to the Pair Function

You can save up to three phone numbers (like frequently used ones) from the phone book, and make calls or send mails with a simple operation.

You need to save Pair Partners to the phone book beforehand. For details on how to save numbers in the phone book, see pages 40 and 41.

Press in the idle screen, press to display the tab you want to save a partner to.





Press স্থ্যে (set).





Press to select the person to save, and press (save).



Name, Phone no., Mail address and image of the person you selected are saved.

# Making a call by using Pair Function

1

Press in the idle screen.





2

Press • to select the person to call.





3

Press to select (Call), and press (Select).





To send mail

Press (a) to select (E-mail) or (C-mail), and press (select) in step 3.

For details on how to create or send e-mail, see steps 7 to 11 on pages 50 and 51.

For details on how to create or send C-mail, see steps 3 to 4 on page 58.

# Mail

## Using e-mail


EZweb subscription required



E-mail allows you to exchange mail with PCs or cellphones that support e-mail. You can send mail up to 5,000 double/10,000 single byte characters, and photos and movies.

## Before using e-mail

- You need to subscribe to the EZweb service to use the e-mail service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase.
- · Make initial settings before using the e-mail and EZweb services. See page 23 to make initial settings.
- · You can send e-mail to up to five recipients at a time.
- · You can send up to 1,000 e-mails (including recipients of messages) in one day.
- · It may take a short while to send/receive mails when they have attachments.

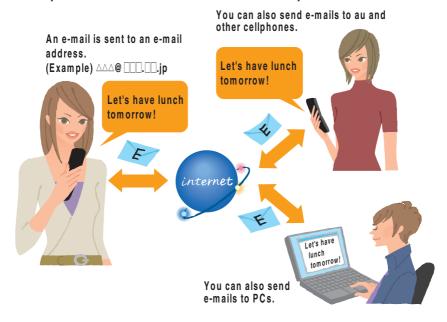

# Creating and sending e-mail

Press (mail) in the idle screen.





Press to select "Create new," and press ( ) (select).






#### **Icons**

To (E-mail address): The e-mail address of the recipient

Sub (Subject) : The subject of the e-mail (Attached data): The data attached to e-mail (Text) : The main text of the e-mail

Press ( to select To (E-mail address), and press









There are three types of destinations: To, Cc and Bcc. You can send e-mail to up to five destinations at a time (up to 640 single byte characters including To, Cc and Bcc).

4

Press to select "Phone book," and press (select).





- Որդ

You can select an address from sent/received record or enter an address manually.

Press to select a person you want to send an e-mail to, and press (select).





Press to select an e-mail address, and press (select).





Press to select Sub (Subject), and press (select).





Enter the subject, and press

(ok).





<u>ai</u>

Press to select (Text), and press (select).






10

Enter the main text, and press  $\stackrel{\frown}{}$ 



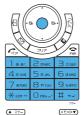



11

Press (send).

The e-mail is sent.



# Opening a received e-mail

#### When you receive an e-mail

A message and appear in the idle screen.



1

Press (select).



Inbox Unread
M folder

If older1
2 Folder2
2 Folder3
4 Folder4
5 Folder5
6 Folder6
7 Folder6
9 Folder8
9 Folder9

**Icon** 

:The folder containing new mail

Press to select the folder containing new mail, and press








**Icons** 


The "read mail" that has already been read The "unread mail" that has not yet been read


Press to select the new mail, and press (viewer).



How to view received mail

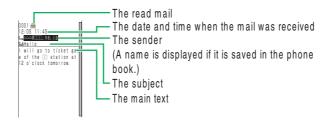





1

Press (mail) in the idle screen.





Icon

:The "unread mail" that has not yet been read

The number on the right side is the number of unread
mails.

Press to select "Inbox," and press (select).



Inbox	Unread
<b>№</b> M folder	1
1 Folder1	
≥ Folder2	
■ Folder3	
♣ Folder4	
5 Folder5	
<b>6</b> Folder6	
<b>Z</b> Folder 7	
■ Folder8	
9 Folder9	

Press to select the folder containing the mail you want to read, and press (select).



M folder	New	1/020
0001🖂		□□. n e.
0002	Jane	Moore
0003	Kate	Dicke
0004	Jane	Moore
0005	John	Smith
0006	Kate	Dicke
0007	John	Smith
0008	John	Smith
0009	Ron	Edward
0010	John	Smith
0011@	Jane	Moore
0012	Kate	Dicke

Press to select the mail you want to read, and press (viewer).





# Replying to a received e-mail

See steps 1 to 4 in "To open an e-mail in the Inbox" (page 53) to display the e-mail to reply.



2

Press (reply).



TeMCate Dickens
SwRe:Meet with you

Tomorrow morning 1'
m waiting in the so
uare in front of th
e △△ station.

**Sub** (Subject) is prefixed with "Re:," and the main text of the e-mail is quoted.

3

Press to select (Text), and press () (select).






4

Input the main text, and press





(XEEO¥)



5

Press (send).

The e-mail is sent.



# Reading e-mails with photo or movie attached

Example: To read an e-mail with photo and movie attached

1

# See steps 1 to 3 in "Opening a received e-mail" (page 52) to view a mail.

The photo is displayed.



2

Press to select a file name, and press (recv).





The movie is received. Press (play) to view the movie.



- Press to select a photo, and press (view) to display the entire photo on the
- Some attached data do not appear automatically depending on their size. If they do not appear, go to step 2.
- It may take a short while to send/receive mails depending on the data attached to them or the reception strength of the place you are in.

# Filtering spam

We recommend that you set our mail filter function to block spam.

Using Supportive setting, you can set mail filter function with easy operations answering onscreen questions.

#### Setting the mail filter

Example: To access the Supportive setting

- 1) Press (mail) in the idle screen, and use ( and ( ) to select "Settings" → "Mail filter."
- ② Use (♣) and (●) to select "Yes" → "次へ."
- ③ Enter your security code and use ( ) and ( ) to select "送信." Then, follow the on-screen instructions.



#### Simple settings

サポート設定 Supportive setting You can set your mail filter preferences by answering questions.

This is recommended for those who want to confirm one's preferences step by step.

フィルターレベル(高) Filter level (Strict)

You can block all incoming e-mails from PC. This is recommended for those who use e-mail only between cellphones.

フィルターレベル(中) Filter level (Moderate)

You can block the incoming e-mail from specified sender. This is recommended for those who have troubles with spam sender.

フィルターレベル(低) Filter level (Normal)

You can block the incoming e-mail containing "未承諾広告※" in it's title, and "なりすましメール." This is recommended for all e-mail users.



By changing your e-mail address, you can prevent spam from being received. For details on how to change e-mail address, see pages 24 and 25.



ください。 質問へ ∢戻る

# **Using C-mail**

#### About C-mail

C-mail allows you to exchange mail among other au cellphones that support C-mail using cellphone numbers. You can send C-mail up to 50 double/100 single byte characters.



## C-mail Safety Block

C-mail Safety Block allows you to reject C-mails that include URL (http:// $\triangle\triangle$  $\triangle$ , https:// $\triangle\triangle$  $\triangle$ ) or phone numbers in the C-mail main text.

C-mail Safety Block is valid by default. You can cancel the setting to receive C-mails that include URL or phone numbers.

# **Creating and sending C-mail**

Hold down (mail) for at least one second in the idle screen.






Press to select "Create new," and press (select).





Enter the main text, and press

(o) (ok).

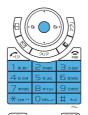



Press (send).





Press 🗘 to select "Phone book," and press ( ) (select).





You can select a phone number from sent/received messages or enter a phone number manually.

Press 🜓 to select a person you want to send a C-mail to, and press ( ) (select).





Press ♠ to select a phone number and press (select).





Press (select).

The C-mail is sent.



# Opening a received C-mail



Press (select).







Hold down (mail) for at least one second in the idle screen.





Icon

:The "unread mail" that has not yet been read The number on the right side is the number of unread mails.

Press to select "Inbox," and press ( ) (select).





Press 🗘 to select the C-mail you want to read, and press







# Camera

The W44S has a 3.17 Megapixel camera and allows you to take photos and record movies. When you take photos, you can focus on your subject automatically by using auto focus function.

# What you can do with the camera

You can have fun with photos and movies on the W44S.



You can set photos you have taken as the image for the idle screen, or display them when you have an incoming call, or save photos or movies to the phone book.

#### You can mail photos and movies.

You can send images up to 500 KB\*\* by attaching to an e-mail.

It may take a short while to send/receive mails depending on the reception strength of the place you are in.







### You can print out photos or browse them using a PC.

You can save photos you took in the "Memory Stick Duo" (sold separately) and print them out with a printer or at a DPE shop, or browse them using a PC.




# Successful taking of photos/movies

#### How to hold the W44S

To take "QVGA," "QQVGA" or "WideQVGA" photos



To take "VGA," "SXGA," "UXGA," "2M(16:9)," "3M" photos or record movie

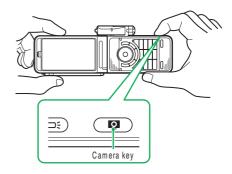

#### How to set the W44S

- 1) Hold your bent arm tight against your body.
- ② Hold the main unit not to shake it.
  If your armpits are open or your arms are stretched, the main unit may move and it may cause a blur.
- 3 Be sure not to cover the lens with your fingers.

#### To stabilize the shot

1 Do not move the main unit.

Do not move the main unit after you press the shutter until the shutter sound stops. Be careful especially when you shoot in the dark.

(2) Use self-timer

You can prevent a blur caused by pressing the shutter.


# **Taking photos**

Press (camera key) on the side of your cellphone in the idle screen.

The photo monitor screen appears.



View the subject you want to take on the photo monitor screen.

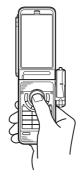



Press (AFlock).

W44S camera automatically focuses on the subject. And you hear a short sound then frame's color turns into green from white.







To automatically focus on the subject, half-press (camera key) on the side continuously. When you hear a short sound and frame's color turns into green from white, full-press (a) (camera key).

# Camera

## Press (shoot).

You hear the shutter sound, and the photo you have taken is displayed (preview screen).






5

## Press ( ) (save).

"Saved in data folder" appears, and the display returns to the monitor screen.



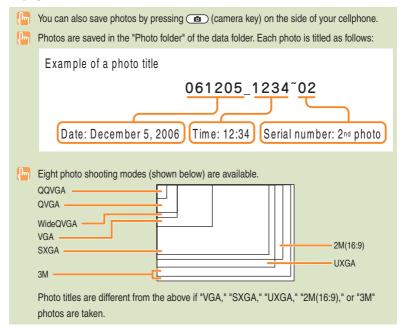

#### About the "Memory Stick Duo" (sold separately)

If you take photos with "VGA," "SXGA," "UXGA," "2M(16:9)," or "3M" with inserting the "Memory Stick Duo" in the W44S, the images are saved in the "DigiCame folder" in the "Memory Stick Duo."

# **Recording movies**


Hold down (camera key) on the side of your cellphone for at least one second in the idle screen.

The movie monitor screen appears.



You can also display the movie monitor screen by pressing 🛒 (movie) in the photo monitor screen.

Hold the W44S horizontally with both hands. View the subject you want to take on the movie monitor screen.

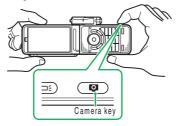




Press (camera key) on the side of your cellphone.

You hear the shutter sound, and olinks when recording starts.



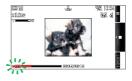



You can also record movies by pressing ( ) (rec).

#### To cancel recording

Press (cancel).

#### To stop recording

Press (camera key) or ().

#### When you stop recording or the recording time ends

The first recorded screen is displayed vertically (preview screen).




4

## Press ( ) (save).



"Saved in data folder" appears, and the display returns to the movie monitor screen.

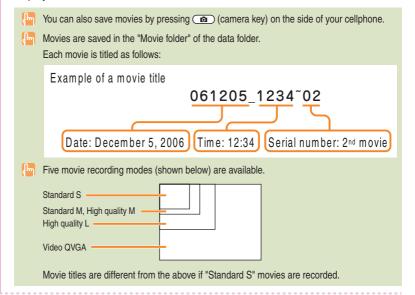

#### About the "Memory Stick Duo" (sold separately)

If you record movies with "Video QVGA" with inserting the "Memory Stick Duo" in the W44S, the images are saved in the "Movie folder" in the "Memory Stick Duo."

# Viewing photos/movies you have taken

Hold down for at least one second in the idle screen.





Press to select " Photo folder" or " Movie folder," and press (select).





Press to select the date folder containing the photo or movie you want to view, and press (select).





Press to select the photo or the movie you want to view/play, and press (view/play).





# Attaching a photo/a movie to e-mail

Press (E-mail) in the preview screen immediately after you have taken the image.






The create screen appears.

For details on how to create and send e-mail, see steps 3 to 11 on page 49 to 51.






"Cannot attach over 500KB Resize?" may appear. Press to select "Yes," and press (select) to select the size.

# **EZweb**


**E**Zweb subscription required

#### About EZweb

You need to subscribe to the EZweb service to use the EZweb service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase. Make initial settings before using. If you have not made initial settings yet, see page 23. EZweb is an information service that allows you to enjoy the Internet on your cellphone. With EZweb, you can obtain Chaku-Uta-Full®(full songs), the latest news, and other contents from information sites.

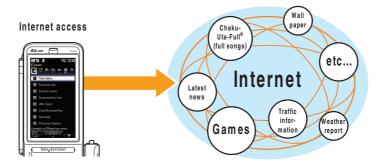

# Displaying the EZ Top menu

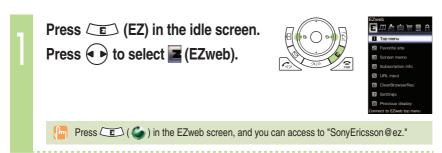

# Press to select "Top menu," and press (select).





#### キーワード検索機能(Keyword search function)

Provides information search function by keywords

#### カテゴリで探す(Search by category)

Searches for a site by category

#### EZサービスで探す(Search by useful EZ services)

Introduces useful and amusing recommended services special to EZweb

#### トップニュース(Top news)

Provides the automatically-updated latest news

#### 最新オススメ情報(Latest recommended information)

Introduces various genre's special features or contents on EZweb

#### デイリーツール(Daily tool)

Provides daily weather forecast or fortune-telling and useful transit information service

#### ビジネス&ニュース(Business & News information)

Provides the latest news such as weather, and other information beneficial for business

#### エリア(Regional information)

Provides regional information such as transit or map search

#### ショッピング&オークション(Shopping & Auction information) Provides information about shopping malls where you can

purchase goods with your cellphone and the information about the auction where you can put up or go for easily

#### ライフ(Useful daily life information)

Provides information beneficial for daily life

#### ホビー&カルチャー (Hobby & Culture information)

Provides the latest information on hobby such as games, music and e-book, and entertainment trends

#### au My Page

Provides various information, useful tools or mass storage capabilities to suit your needs

#### au stvle

Introduces au-recommended information and sites

#### とくする情報(Valuable information)

Provides gifts and beneficial information exclusively for EZweb service subscribers for free

#### auお客さまサポート(au Customer Support)

Provides phone bills, procedures, au information, and au on-line manual

### カンタンアクセス・オープンサイト(Simple Access & Open Site) Introduces Simple Access and Open Site

#### 災害用伝言板(Disaster Message Board)

Registers/checks the vital information in disasters

#### **ENGLISH**

Introduces English sites



It may take a short while for each screen to appear.



The screen layout and contents are just examples. These are subject to change.

### Saving your favorite sites

Display the site you want to save, and press (Browser Menu).





Press to select "New bookmark," and press (Select).





Press (cmplt).



(h-)

You can save up to 100 sites in the Favorite site. However, some sites may not be saved.

### Viewing a site saved to the Favorite site

Press (EZ) in the idle screen.


Press to select (EZweb).





Press to select "Favorite site," and press (select).





Press to select a folder, and press (select).





4

Press to select the site you want to view, and press



(select).

### Confirming your call costs

You can confirm call and communication charges.

Press (start) in the idle screen.





2

Press Table 1 Table 1.

Press to select "Yes," and press (select).

Select the item you want to confirm.

	2017	TYLE PARE
7 as.e.c	2 #ABC	Эзрег
4 л. сні	5 #JKL	6 # MNO
7 st ross	8 ютич	9 swxxz
<del>X</del> 000 ***	Danie-	# **
		79-

### Downloading a Chaku-Uta® (ringtone)

Example: To download a Chaku-Uta® (ringtone) and specify it as a ringtone

Press (EZ) in the idle screen.

Press to select (EZweb).





Press to select "Top menu," and press (select).





Press 🌓 to select "カテゴリで 探す," and press ● (OK).





Press ( to select "着うた," and press ( Select).





### Press ( ) to select the desired site, and press ( ) (Select).



Follow the on-screen instructions to select the melody you want to download.



To use paid information site, you must enter the EZ Password or the Premium EZ Password. EZ Password or Premium EZ Password is any 4-digit number that you wrote in the application form.

#### Select and download a melody.

Download the melody by following the on-screen instructions.

△△△ Download completed

When downloading finishes, press (play) to play back the Chaku-Uta®(ringtone), and press (save) while the Chaku-Uta®



■ Save to
Phone ring tone
E-mail alert
Server alert
C-mail alert
NewsFlash alert
<b>₹</b> Alarm1
<b>A</b> ∆Alarm2
<b>♦</b> Alarm3
<b>♦</b> Alarm4
<b>₹</b> Alarm5
Des phone ring tone
Des receive E-mail

Press ( to select "Phone ring tone," and press ( (select).

(ringtone) is playing.



The downloaded Chaku-Uta® (ringtone) is specified as the ringtone.

### Downloading a Chaku-Uta-Full®(full song)

Press (EZ) in the idle screen.

Press to select (au Music).





Press to select "EZ Music!," and press (select).



Download the Chaku-Uta-Full®(full song) by following the on-screen instructions.

- You can also download the Chaku-Uta-Full® (full song) by performing the following operation.

  Press (EZ) in the idle screen and use to select (EZweb) with use and to select "Top menu" → "カテゴリで探す" → "着うたフル."
- To use paid information site, you must enter the Premium EZ Password. Premium EZ Password is any 4-digit number that you wrote in the application form.
- The screen layout and contents are just examples. These are subject to change.

### **EZ Channel-Plus/EZ Channel**

With EZ Channel-Plus/EZ Channel, the unique au mobile program, the latest contents are automatically delivered and you can enjoy them just like TV or magazines simply by registering your favorite programs on W44S.





### Enjoying EZ Channel-Plus/EZ Channel

1 Register for the programs you are interested in.

You can register up to 16 programs (3 programs with EZ Channel) selected from "Program Guide."

They are downloaded automatically from midnight to early morning, then saved to the "My Channel" directory.



#### ② Play back the program.

You can watch the program saved to the "My Channel" directory anytime.

3 Save the program.

When a registered program is updated, the program is overwritten to old one. You should save the programs you do not want to delete in "Multi folder" etc..

%In some cases, you may not be able to save a program because of copyright protection.


- To register EZ Channel-Plus programs, subscription to the discount service of the data communications charges is required.
- Be sure to make initial settings before using the EZ Channel-Plus/EZ Channel. See page 23 to make initial settings.
- EZ Channel downloads a large amount of data (maximum total approximately 5Mbytes), for each. To use EZ Channel, subscription to the discount service of the data communications charges is recommended.
- When programs arrive, they are automatically downloaded. Keep the battery full and the power turned on within the service area.
- The screen layout and contents are just examples. These are subject to change.

# au Media Tuner

### What you can do with au Media Tuner

#### EZweb subscription required

With au Media Tuner, you can enjoy EZ Television (1Seg), Digital Radio or EZ Channel-Plus switched with simple switching operation.

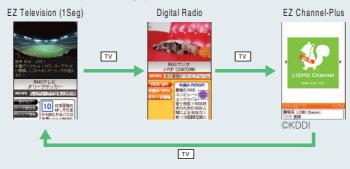

### EZ Television (1Seg)

You can enjoy "1Seg" service (digital terrestrial TV broadcasting) in Japan. You can record the programs while watching.

Page 80

#### Digital Radio

Please visit the Digital Radio Promotion Association website (http://www.d-radio. jp/top.html) for more information.

Digital Radio is provided as trial version. Current provided areas are Tokyo and Osaka (as of December 2006, to be expanded).

Page **80** 

#### **EZ Channel-Plus**

You can enjoy registered programs with EZ Channel-Plus or EZ Channel.

Page 81

# au Media Tuner

### **Initial settings for au Media Tuner**

When you use au Media Tuner for the first time, make initial settings by following steps.

1

Hold down for at least one second in the idle screen.





2

Use ① to select "OK" and press ② (選択).





3

Following onscreen instructions,



"取得する"/"取得しない,"

"表示する"/"表示しない,"

"表示する"/"表示しない,"

and press ● (選択).





4

Use ( to select "オート設定," and press ( ) (選択).





Follow the onscreen instructions. As you complete initial settings, EZ Television (1Seg) is activated.

### **Enjoying EZ Television (1Seg)/Digital Radio**

Hold down [TV] for at least one second in the idle screen.

> When you use au Media Tuner for the first time, make initial settings (page 79). As you complete initial settings, EZ Television (1Seg) is activated. After the first time activation, the last media mode you used is activated.





#### Press TV.

Each time you press TV, the media mode changes in following order:

EZ Television (1Seg)→Digital Radio→EZ Channel-Plus








When you use Digital Radio for the first time, radio channel setting screen appears. For details, see step 4 on page 79. Outside Digital Radio reception areas, select "その他の 地域(設定なし)" in "マニュアル設定" for radio channel setting (page 78).

### To change channels

Each time you press (E)/(E), channels change. When you press (E)/(E) while the first/last channel in current media mode, channels change to previous/next media mode.

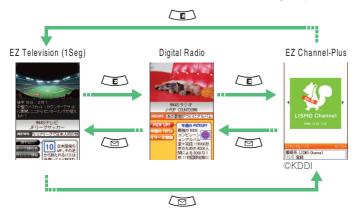

### **Enjoying EZ Channel-Plus**

Hold down for at least one second in the idle screen, press to change media mode to EZ Channel-Plus.





Use to select the program to play, then press (再生).





# **EZ Navi**

### What you can do with EZ Navi

#### EZweb subscription required

EZ Navi is a convenient system based on the geographic (GPS) information.

Press (EZ)

Idle screen

Idle screen

In more state of the s

When the front passenger check for driving route information: 
"Passenger Seat Navi"

Passenger Seat Navi is the service for the passenger sitting next to the driver, providing the route information to your destination using map or voice navigation.



When you want to know where your child is: "Position Search"

With the operation from W44S, you can check the position of a cellphone supporting "Position Search." There are two kinds of services: "Auto Position Search" (paid), "Position Search Mail" (free).



When you want to be notified of a specified period of time or area:

"Area Message"

First you specify area and time frame. And as the one (for example, your child) enter (or stay)/leave (or are not) there, this feature sends a notice message automatically to another specified au phone.



#### When you go out: "EZ Navi Walk"

You can display various menus convenient for going out.



ナビをする	Route information (voice prompt) for your destination or search shops/facilities around
地図を見る(無料)★	See your current position or selected map
乗換検索する(無料*1)★	Search transit/time table or railway information
道路情報を見る	See real time route information nationwide
もっとナビウォーク	Help information for various settings or search by web
インフォメーション	Membership registration or inquiries

The star symbol shows that you can use your voice to enter search terms. This is called "Voice input" function.

\*1 Some menus are paid service.

#### Return home





(Search result display)

After registering your home location beforehand, you can easily navigate a route to your home from wherever you are.

#### 3D Navi



Navigation engine by NAVITIME JAPAN Map: Syobunsha Publications, Inc./ Sumitomo Electric Industries, Ltd. 3D data: ZENRIN CO., LTD./GEO Technical Laboratory Co., Ltd. Z06A-No. 2137

Change to 3D display around guidance point or your destination.

#### **Your Current Position Map**

current location in real time.



The result of the first measurement is displayed as no the map. Your current location will be displayed as in real time by successive measurement.

Select "Your Current Position Map" to display

#### E-mail My Map



You can inform your partner where you are by mail when you plan to meet him or her.

- For the use of EZ Navi, the information fee is charged in addition to the data communications charges.
- During 3D display, direction for the route to your destination is the normal position (regardless of your direction).
- "3D Navi" uses massive data transmission.
- "3D Navi" is used in Tokyo 23 district areas/major cities. Effective areas are 50 m from main transactions around.

### What you can do with Security Navi

**EZweb** subscription required

#### What you can do with Position Search

When your child does not come home on time and you are worried if your child may be lost, you can confirm his/her geographic location on a map with a simple operation. There are two kinds of "Position Search" services: "Auto Position Search" and "Position Search Mail."

### Auto Position Search



#### Feature

 You must register each other (parent & child) in each other's cellphone beforehand. When parent searches for child's position, W44S automatically shows the child's current position on the map without operations from the child. Note: Monthly fee is charged separately.

Example: When the parent searches the current position of his/her child.

#### Position Search Mail



#### Feature

- By sending e-mail from parent to child, parent can confirm the child's position.
- When child's number is saved in Phone book, parent can confirm the child's position easily without membership registration.

Note: When confirming, this service requires child's operations to receive/reply e-mail to parent.

Example: When the parent sent a mail to his/her child.

### What you can do with Area Message

First you specify area and time frame. And as your child enter (or stay)/leave (or are not) there, this feature sends a notice message automatically to your W44S.

### Area Message



#### Feature


The parent can confirm his/her child's safety
when the child goes to after school lessons
and he/she is worried about the child's way
home. The child's cellphone automatically
informs the parent's cellphone that the child is
taking the usual route.

Example: When the parent confirms the area his/her child is in.

- "Security Navi" services are available only among the cellphones supporting this feature.
- To use "Security Navi" services, both cellphones must support this feature, and need to save each other's phone number in their phone book.
- To use "Security Navi" services, review the terms of service, and also set Navi Password before the first use.
  - \* Both sender/receiver sides need to agree the terms of service.
- In places like underground shopping mall or inside buildings where GPS satellites are difficult to receive signals, you may not be able to get accurate location information.
- Area Message may not function properly due to the inaccurate location information obtained by your W44S.
- You cannot confirm the location if the other cellphone is out of the service area, in some operations, set to reject the call, or without the application.
- If you uses over your limit with "The Use Suspention Course of Price Safety Service" and stop services, you cannot use Security Navi.
- The screen layout and contents are just examples, and may differ from the actual screen.
- "Security Navi" services are not available, after canceling C-mail service or with EZ apps restriction function.
- Free calling time provided by your price plan can be applied to EZ apps transmission fees; but family discount of C-mails or discount service of the data communications charges cannot be applied.
- For obtaining location information or displaying map, the information fee is charged in addition to the data communications charges.

# au Music

### What you can do with au Music

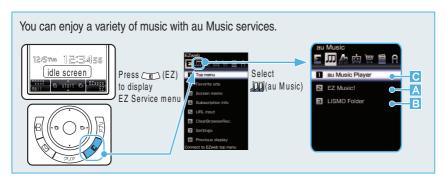

A To download Chaku-Uta-Full® (full song): "EZ Music!"

You can download Chaku-Uta-Full® (full song) by accessing official site.

B To save audio files/Play lists: "LISMO Folder"

Downloaded Chaku-Uta-Full® (full song)/Play lists are saved in LISMO Folder. Transferred data from au Music Port are also saved in LISMO Folder.

#### To enjoy music: "au Music Player"



You can use au Music Player to play downloaded Chaku-Uta-Full® (full song), or data transferred from au Music Port. au Music Player also allows you to make the list of your favorite music and send that list by e-mail. You can enjoy music with "Uta-tomo™" function or "Listening Search" function.

#### Play list




You can save your favorite audio files to play list and play back them in the order you like.


#### Photo album



You can save your favorite image files to photo album and view them in slide show mode. Also, you can view the slide show and play back audio files at the same time.

#### Uta-tomo™









With this service, you can find someone having same preferences in music or local hits.



"Listening Search" is the search service using your W44S's microphone. With this service, you can find out song title, artist name, or album title by playing back music close to the microphone.



The screen layout and contents are just examples, and may differ from the actual screen.

### Playing back a Chaku-Uta-Full® (full song)

Press (EZ) in the idle screen.

Press to select (au Music).





Press to select "au Music Player," and press (select).





Press **()** to select "au Music ライブラリ," and press **()** (選択).





Press **t** to select "全曲一覧," and press **(**選択).





Press ● (►).





- You can enjoy sounds though speaker (with no stereo earphone connected). When you do not want to play back from the speaker, connect stereo earphone to W44S beforehand (page 14).
- The screen layout and contents are just examples, and may differ from the actual screen.

### Operations during playing back

: Skip to the beginning of the current audio file

(1 second): Rewind

: Skip to the next audio file

(1 second): Fast forward

Pause/play back

Pause/play back

Increase the volume

Decrease the volume

### To end au Music Player

- 1 With au Music Player active, press 2.
- 2 Press to select "Close player" and press (select).

### To switch to BGM playing

You can perform other operations during playing back.

- 1 While playing back an audio file, press 2.
- 2 Press (\*) to select "PlayBackground," and press (•) (select).

# **EZ FeliCa**

EZweb subscription required

### What you can do with EZ FeliCa

EZ FeliCa allows cellphones to utilize the technology of contact-free cards.

Just by holding the cellphone over reader/writer (external device)\*\*, you can go shopping by using the cellphone for e-money, or use it as member's cards or point cards.

To use EZ FeliCa, you need to download applications from service providers you want to use. Three service download applications are preinstalled by default. For details on the service download applications, see page 93.

\* Devices equipped on electronic cash registers of stores that exchange data with FeliCa chips.



### Notes on using EZ FeliCa

- Be sure to keep your W44S safe with you. In case you lost your W44S, contact the company providing the contents of the EZ FeliCa-supported services you are using.
- FeliCa lock and Remote lock are recommended for the case of loss or theft of your W44S.
- We shall not be held responsible for any data loss caused by theft, loss or malfunction of the cellphone.
- Customers are recommended to manage their various security code and passwords by themselves very carefully.
- Contact the company providing the FeliCa-supported EZ apps for details.
- When using EZ FeliCa, registration for the service may be required depending on the service you want to use.
- Compatible models for each service are subject to change without prior notice.
- Even if your cellphone models are compatible with EZ FeliCa service itself, some of the services may be unavailable. For more information, contact an au shop or Customer Service Center.

### Communicating with reader/writer

You can use EZ FeliCa simply by holding the FeliCa mark over reader/writer.

Hold the FeliCa mark over reader/ writer.

The FeliCa sign lights up, which indicates that you can make a contactless transaction between your cellphone and reader/writer.



- You can use EZ FeliCa without launching FeliCa-supported EZ apps.
- EZ FeliCa is available even when the power is turned off. However, when the battery is very low, you may not be able to use EZ FeliCa.
- Even when the power is turned off, the FeliCa sign is lights up.
- Be careful not to bump the FeliCa mark against reader/writer when holding over it

### Setting the FeliCa lock


You can restrict the use of EZ FeliCa by setting the FeliCa lock. You can temporarily release and use EZ FeliCa for a certain period of time when FeliCa lock is set by setting "Quick release."

Press ( ) (start) in the idle screen, and press 4 team 1 to a 2#ABC





Enter Lock No., and press (

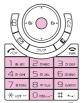



Press ( to select "Set," and press ( ) (select). Press ( ) to select "ON," and press ( ) (select).



Press (cmplt).

When you set "Quick release," use  $\bigcirc$  and  $\bigcirc$  to select "Quick release"  $\rightarrow$  "ON" and



When FeliCa lock is set, just is displayed in the idle screen.



Even when you set Auto lock, the FeliCa lock is not automatically set.



In case you lost W44S, you can set the FeliCa lock by setting Remote lock. See page 102 to set Remote lock.



When the battery is fully discharged while the FeliCa lock is on, you will be unable to release the FeliCa lock. Be careful of the remaining battery power.

### To release the FeliCa lock temporarily (quick release)

When you set "Quick release," you can temporarily release the FeliCa lock.

- 1 Press EZFeliCa (EZ FeliCa key) in the idle screen.
- 2 Enter release code.
  - You can release FeliCa lock temporarily with W44S closed.
  - You can also release the FeliCa lock temporarily by holding down for at least one second in the idle screen and entering Lock No.
  - FeliCa lock is reset when [E2560] (EZ FeliCa key) is pressed again, is held down for at least one second in the idle screen, or five minutes passes.

### Using FeliCa-supported EZ apps

Three FeliCa-supported EZ apps are preinstalled for W44S by default.
FeliCa-supported EZ apps: おこづかい日記、クイック確認 For 「Edy」、QUICPay設定アプリ

- To launch FeliCa-supported EZ apps
- 1 Press ( ) (start) in the idle screen.
- ② Use ( and o to select "EZ FeliCa Menu" → "アプリ一覧."
- ③ Use (♣) and ●) to select the FeliCa-supported EZ apps you want to launch.
  - 【 If you want to use FeliCa-supported EZ apps that you have not yet downloaded, visit "EZ FeliCa サイトへ接続" and download FeliCa-supported EZ apps.

# EZ · FM

EZweb subscription required

With W44S, you can listen to the FM radio.

You can check titles of songs or download the songs you liked (when provided by Chaku-Uta<sup>®</sup>). while listening to EZ • FM.

#### How to listen to EZ · FM

The remote controller with microphone cord/standard AC adaptor 01 (optional) cord works as an antenna. Use either of the two wavs below to listen to EZ • FM:

- By connecting a stereo earphone to the W44S.
- By connecting the standard AC adaptor 01 (optional) to the desktop holder and inserting the W44S into the desktop holder.

When you want to use the speaker, set "スピーカー/ イヤホン切替" (Switching speaker/earphone) to "スピーカー" (Speaker). For details on the setting, see page 96.



EZ • FM sounds from a stereo earphone by default.



You can listen to EZ • FM with W44S closed.



When you use EZ • FM for the first time, reception area selection screen appears. Select your reception area.



When EZ • FM is activated, the prior written notice appears. Read it thoroughly and select "承諾(次回から非表示)," the prior written notice does not appear again.

### To listen to EZ · FM clearly

Extend the remote controller with microphone cord/standard AC adaptor 01 (optional) cord as long as possible to search for better reception.

For indoor use, we also recommend listening to EZ • FM near a window in order to get a signal.

### Listening to EZ · FM

Press ( ) (start) in the idle screen. Press ( to select "TV/ Radio," and press ( ) (select).







You can also listen to EZ • FM by pressing (EZapps) in the idle screen, pressing to select "EZ · FM," and pressing ( ) (起動).

Press ♠ to select "EZ • FM." Press 🗘 to select "EZ • FM," and press ( ) (select).



EZ • FM is received and 위版 appears.

How to read the EZ · FM screen



You can change the selected item by pressing 💯 in the EZ • FM screen. Pressing allows you to operate the selected item.



When there is an incoming call with stereo earphone connected to your W44S, you can answer the call by pressing . Pressing incoming switch on stereo earphone also allows you to answer the call using stereo earphone. For Incoming calls while using Mobile Theater Style, press incoming switch/reopen W44S vertically (Keitai Style) and press to answer.

#### Listening to EZ · FM (continued)

#### Operations during receiving

- Select a radio station
- Display the information such as the name of the artist or the song title
- 🌓/ভা /েক্টে :Increase the volume
- ●//📵/ﷺ:Decrease the volume
  - Information may not be provided depending on the programs.
  - Listening to EZ FM is free of charge. The data communications charges are needed for displaying the song title or other web based services.
  - The specification is subject to change without prior notice. The screen shown is an example.

### To switch the sound output (Speaker/earphone)

- 1) Press (MENU) in the EZ FM screen.
- ② Use 🌓 and to select "設定" → "ラジオ機能設定" → "スピーカー / イヤホン切替" → "スピーカー " or "イヤホン" → "決定," and press (決定).

#### To End EZ • FM

- 1 Press in the EZ FM screen.
- 2 Press to select "Quit," and press (select).
  - EZ FM ends automatically with no operation for two hours by default.

### ■ To listen to EZ · FM as BGM playing

You can perform other operations during listening to EZ • FM (as BGM playing).


- 1 Press in the EZ FM screen.
- 2 Press ( ) to select "Suspend," and press ( ) (select).
  - While listening to EZ FM (as BGM playing), pressing in the idle screen displays confirmation screen asking whether you end EZ FM or not. When you press (a) to select "Quit," and press (a) (select), you can end EZ FM.
  - While listening to EZ FM (as BGM playing), pressing (EZapps) in the idle screen, EZ FM screen appears again.


# PC site viewer

#### **E**Zweb subscription required

You need to subscribe to the EZ WIN course to use the PC site viewer service. Contact an au shop or Customer Service Center if you did not subscribe to the service at the time of purchase. With PC site viewer, you can view WEB sites just like the ones shown on your personal computers on your cellphone. WIN ensures high-speed (up to 2.4Mbps downlink) data communications.

### What you can do with PC site viewer

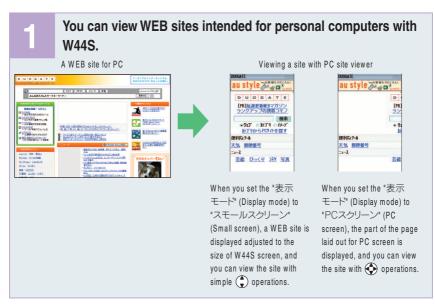

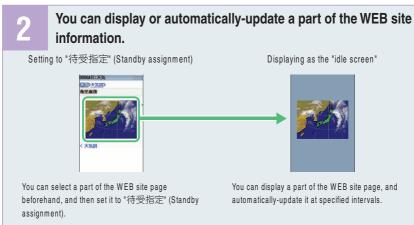



The screen layout and contents are just examples, and may differ from the actual screen.



Ib When you press [テッラッ] (接続) displaying the idle screen selected by "待受指定" (Standby assignment), you can operate the PC site viewer from the top of the page as usual.



Browsing in Mobile Theater Style is also possible.

### **Mastering operation basics**

Press ( ) (start) in the idle screen.





Press to select "PC site viewer," and press (select). Press (OK).





Warning message about data communications charges appears.

Press р to select "トップ ページ," and press (●) (選択).





"Duogate" (http://duogate.jp/) is set by default.



The contents on the top page are just examples, and may differ from the actual screen.

Press ( ).

The screen scrolls.



Press ( ) and you can select the links on the screen. When you select a link and press (選択), the linked site appears.

# PC site viewe

### Using "待受指定" (Standby assignment)

You can set a part of the WEB site as the idle screen. You can set it to be automatically-updated at specified intervals.

The WEB site selected by "待受指定" is displayed after a specified time passes in the idle screen.

See steps 1 to 4 in "Mastering operation basics" (page 98) to display a site.



2

Press (メニュー). Press to select "待受指定" and press (選択).





3

Press (オプション). Press to select "新規作成" and press (選択).





Pressing � narrows area displayed by "待受指定."

Pressing (拡大) and 🔷 widens area displayed by

"待受指定." Paradia ~ (//pub) and in

Pressing (縮小) again narrows area displayed by

"待受指定."

4

Press ( ) (OK) twice.





Press (●) (編集), and enter the title, and press ( ) (ok).





Press 💯 (登録), and press 📨 (設定).





Press ( ) to select the interval to update the idle screen.



When you select the interval to automatically-update the page displayed as the idle screen from among "24時間/12時間/8時間/4時間/2時間/1時間/ 30分/更新しない" (24 hours/12 hours/8 hours/4 hours/2 hours/1 hour/30 minutes/no update), and press ( ) (OK). Warning message about standby assignment appears.

Press (OK) and press (OK) to complete the setting.

As the data communications like viewing homepages include many images charges you so much that you may want to subscribe to the discount service of the data communications charges.

Data communications charges for every update operation with automatically-update (set by "待受指定" (Standby assignment)) are needed separately.

You can use Charge Reference Service. This service estimates this month's data communications charges with discount. By this service, you can see the rough number that was billed 1 or 2 days ago.

From au cellphone  $\Rightarrow$   $(EZ) \rightarrow Use to select (EZweb) \rightarrow Use and and and and$ to select "Top menu" → "auお客さまサポート" (au Customer Support) From your PC  $\Rightarrow$  http://my.kddi.com/ (MyKDDI)

\*Subscription is required for the first use.

# Troubleshoo

# **Troubleshooting**

Symptom	Items to check	Solution	Page
Unable to turn	Is the battery pack properly installed?	Properly install the battery pack.	_
the power on.	Is the battery pack charged?	Charge the battery pack.	13
	Did you hold down ∠≘ for at least one second?	Hold down ✓∑ for at least one second.	18
Unable to make calls.	Is " displayed on the screen?	Make a call from a location where "劉" is not displayed.	18
	Did you enter the area code when entering the phone number?	When making a call to a phone other than a cellphone, first enter the area code even when both parties are inside the same city.	26
	Is the power turned on?	Hold down ✓≘ for at least one second.	18
	Did you press 2?	Press .	26
	Is W44S opened in Mobile Theater Style?	Reopen W44S in Keitai Style.	11
Unable to receive calls.	Is "By" displayed on the screen?	Move to a location where "遏惧" is not displayed.	18
	Is the power turned on?	Hold down ∠≘ for at least one second.	18
No reaction when a key is pressed.	Is the power turned on?	Hold down ✓≘ for at least one second.	18
	Is the keylock set?	Hold down  for at least one second to cancel keylock.	16
Warning tone sounds, and power turns off.	There is not enough power remaining in the battery pack.	Charge the battery pack.	13
Incoming calls are automatically answered.	Is the record message set?	Hold down FERON for at least one second to cancel the record message.	32
Unable to hear the other party.	Is the volume during a call set too low?	Press while you are talking. The volume during a call will increase.	28

Please visit the Sony Ericsson Mobile Communications Japan, Inc. web site for more information.

- · From W44S ⇒ (EZ)(at least one second)(SonyEricsson@ez)
- · From your PC ⇒ http://www.SonyEricsson.co.jp/

# Remote lock

### In the case you have lost your W44S

Using Remote lock, you can lock your W44S (Auto lock and FeliCa lock) remotely against unauthorized use.

### To set up the working environment of Remote lock

Auto lock and FeliCa lock are enabled by calling to your W44S specific times from the phone number specified beforehand.

- (1) Press ( ) (start) in the idle screen  $\rightarrow$  press  $4 \times 000$   $1 \times 000$   $1 \times 000$
- 2 Enter Lock No., and press ( ) (ok).
- ③ Use  $\stackrel{\blacktriangle}{\P}$  and  $\stackrel{\blacktriangledown}{\P}$  to select "Set" → "ON."



- 4 Use and to select "Duration," and input time intervals.

  Duration means the time intervals from the first call till a specified times of calls are received. You can set by the range of 1 to 10 minutes.
- (5) Use ( ) and ( ) to select "Frequency," and input the number of calls.

  Frequency means the number of calls to set Remote lock. You can set by the range of 3 to 10 times.
- ⑥ Use ♠ and ♠ to select "Caller," → the number (1 to 3) where you want to save.

Caller 1 to Caller 3 means the phone number used for setting Remote lock.

- (7) Use (2) and (2) to select "Manually," and input the phone number.

  You can also enter phone number by selecting "Phone book." You can save up to 3 phone numbers.
- (8) Press (cmplt).



#### To set Auto lock on W44S by Remote lock

Make a call to W44S under the working condition (Duration, Frequency, Caller) set by Remote lock.

Remote lock is set, and announcement is played notifying that Auto lock and FeliCa lock are set.



Remote lock cannot be set if W44S is turned off or in the area where reception strength is not good.



# Other features

#### Safety Buzzer

To show that you are in emergencies, you can use the Safety Buzzer function in extreme volume sound. To use this function, set the Safety Buzzer to "ON" beforehand.

- To set the Safety Buzzer "ON"
- 1 Press (start) in the idle screen → press ≥ TABC 9 SWAT].
- ② Use 🗘 and 💿 to select "ON."
  - While Safety Buzzer is set to "OFF," you can set Safety Buzzer "ON" by holding down for at least one second in the idle screen.

### To use the Safety Buzzer

Hold down # 50 for at least one second in the idle screen.

#### To stop the Safety Buzzer sound

Enter the Lock No..

Security buzzer

AStop security buzzer with lock

- The Safety Buzzer sound continues until Lock No. is entered or battery is fully discharged.
- While he Safety Buzzer sound continues, you cannot turn W44S off or perform other operations. But you can dial 110 (Police), 118 (Japan Coast Guard), and 119 (Fire/Ambulance).

#### **Other Functions**

### Various ways to get audio files

You can use SonicStage to transfer ATRAC (Adaptive Transform Acoustic Coding) 3 audio files from CDs, Internet, and PCs to "Memory Stick Duo"; and play them back with W44S.

#### **GLOBAL EXPERT**

W44S supports GLOBAL EXPERT Service using au IC card.

GLOBAL EXPERT is an international roaming service for the customers to insert the au IC card to a GSM compatible cellphone for overseas use.

No special application procedure or daily/monthly fee is required, and the call cost is added to domestic call, making the payment procedure simple.

#### Changeable design

You can select and change the screen/menu design for W44S. Downloaded data can also be used as screen/menu design.

#### Infrared data exchange feature

You can exchange such data as a phone book, profile, or the data in the data folder between au cellphones that support infrared data exchange.

### EZ apps (BREW®)

You can download game software from EZweb sites and play games.

#### **Decoration E-mail**

You can change font color/size and background color. You can also create, send and receive messages containing images/cute animation.

#### au My Page

You can save phone book data, messages and data in data folder to au My Page.

#### **PC** Document Viewer

You can browse document files such as Microsoft® or Microsoft® Excel created with PC.

# Index

Α
accessories10
au IC card12
au Media Tuner78
initial settings79
au Music86
BGM playing89
ending au Music Player89
playing back88
В
battery pack10
battery power, remaining3, 18 before use10
C
C-mail57
C-mail Safety Block57
creating and sending58
icon61
opening
receiving60
movie
photo64
successful taking63
cellphone etiquette1
charge indicator13
charging the battery pack13
confirming your call costs73
confirming your cellphone number
23
cross controller™16
D
desktop holder13
Dialed calls28
Digital Radio80
Disaster Message Board Service
(demonstration)6
display19
domain24

downloading Chaku-Uta-Full <sup>®</sup> (full songs)downloading Chaku-Uta <sup>®</sup> (ringtones)	76
drive mode	4
E	
e-mail	48
attaching photo or movie	
creating and sending	
icons49, 52,	
initial settings	
opening52,	
receiving	52
replying	54
viewing attached photo/moviee-mail address	55
	04
changingconfirming	24
EZ Channel	
EZ Channel-Plus77,	
EZ FeliCa	
communicating with reader/writer	
FeliCa lock	
FeliCa-supported EZ apps	
EZ • FM	
BGM playing	
ending	
listening	
EZ Navi	82
Security Navi	
EZ Service menu	
EZ Television (1Seg)	
EZ Top menu	
EZweb	
confirming your call costs	
Favorite site	
initial settings	23
F	
Favorite site	
saving	72

	making26
icons19	notify/not notify the other party26
idle screen18	receiving27
ID Unsent27	photo
incoming indicator12	attaching to e-mail69
initial settings23	saving65
Internet(See "EZweb")	taking64
internet(See Ezweb)	viewing68
K	playing back Chaku-Uta-Full®
Keitai Style11	(full songs)88
M	power3, 18
mail	R
C-mail57	Received calls28
e-mail48	reception strength3, 18
mail filter56	record message
Main menu20	playing back33
manner mode3, 29	redialing28
Mobile Theater Style11	remote controller with microphone
movie	14
attaching to e-mail69	remote lock102
recording66	ringtone30
saving67	· ·
viewing68	S
ŭ	Safety Buzzer104
N	soft key17
names of parts12	spam 5, 56
0	stereo earphone14, 17
one-ring call5	T
opening11	text input34
optional accessories10	alphanumerics
	Back Space function35
Р	
Pair Function46	changing input mode34 characters assigned to the same key
making a call47	37
saving46	character key assignment table 35
PC site viewer97	deleting characters37
Using "待受指定"	emoticons38
(Standby assignment)99	pictorial characters38
phone book40	sentences39
editing42	symbols
making a call44	uppercase characters37
saving40	Theater menu22
saving from dialed/received calls 45	
	troubleshooting 101
Phone call26	troubleshooting101
if you are unable to answer27	V volume during a call28

# Making an international call

#### au International Call Service

Available without any additional application.

Example: To call 212-123- $\triangle\triangle$  in the USA

- Calling charges for this service are added to monthly mobile phone calling charges and billed together.
- Please check the Country code at the au Customer Center.
- For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Center.

#### 001 KOKUSAI MOBILETALK

Application required.

For inquiries, please contact the KDDI Customer Service Center.

0077-7160

(toll-free; open 9:00 to 20:00 on everyday including weekends and national holiday)

Example: To call 212-123- $\triangle\triangle$  in the USA

- Charges for 001 KOKUSAI MOBILE TALK are charged separately from monthly au telephone charges.
- Please check the Country code at the au Customer Center.
- For charges, please refer to au MOBILE PHONE SERVICE GUIDE or au Customer Center.

### For inquiries, call:

au Customer Service Center (General Information)

#### From EZweb site:



EZ ► EZweb ►Top menu

▶auお客さまサポート

(au Customer Support)

▶お問い合わせ (Inquiries)

\*Menu structure is subject to change without prior notice.

#### From regular phones:



#### From au cellphones:

### 157 area code not required

toll free)

Pressing "zero" will connect you to an operator, after calling "157" on your au cellphone.



Sales: KDDI Corporation

Okinawa Cellular Telephone Company

Manufacturer: Sony Ericsson Mobile Communications Japan, Inc.



Read this to access to

